


Settings Sheet for the Datalogic Powerscan PM9300

Factory Defaults

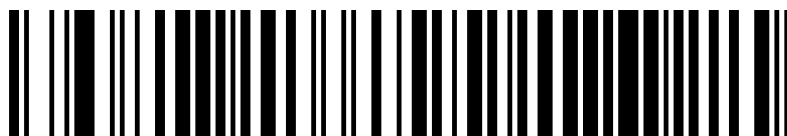

\$P, HA00, P

If you are not entirely sure if the scanner is set to factory defaults please first scan the barcode above.

This sheet will put the scanner in a general configuration applicable for most BOXwise customers. However, the settings below might not be applicable to your situation. If you are in doubt, please contact trancon support.

Unlink



Unlnk

To link the handheld and the base, press the trigger to wake up the handheld and mount it into the base.

If the reader was previously linked to another base, you must first press and hold the button on the base (>5 seconds), then scan the Unlink bar code before re-linking to the new base.

Set cradle in RS-232 Mode




\$P, HA05, P

Set cradle in USB COM Mode



\$P, HA47, P

Enter configuration

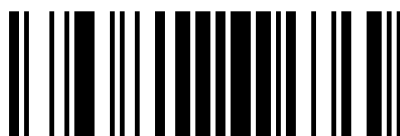

\$P

Set baudrate to 9600



\$CR2BA03

Exit configuration



\$P