

## Enable keypad for the Datalogic Powerscan PM8300



Exit configuration



Pull out the battery, wait a few seconds, then put the battery back in.

Turn on the scanner, the keypad is now enabled.

